 




CAUTION: SAFETY PRECAUTIONS

See *Dell DJ Ditty™ Product Information Guide* for safety and regulatory information.

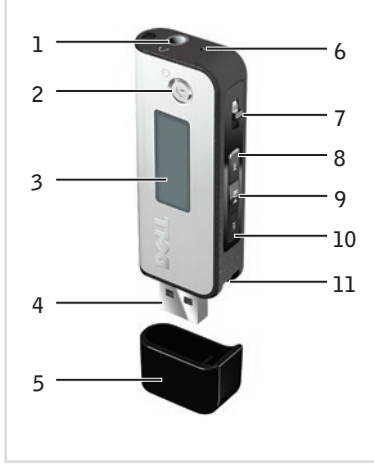

Features

1. headphone connector	7. volume/scroll/select dial (see below)
2. home/power button	8. fast forward/skip forward
3. LCD screen	9. play/pause
4. USB connector	10. rewind/skip back
5. USB protective cap	11. lanyard attachment
6. reset button	

The **volume/scroll/select** dial is used to adjust the volume, navigate the menus and select items.



Install Software

NOTICE: Ensure that your Dell DJ Ditty is not connected to your computer during the software installation process. Close all other applications before installation.

- Insert the *Dell DJ Ditty Product Software* CD into your CD drive. If the CD does not run automatically:
 - Navigate to the CD drive.
 - Double-click **CDINSTALLER.EXE**.
- At the installation screen, click **Install** and follow the instructions on the screen.

NOTE: If the software finds a different version of Musicmatch® already installed on your system, you will be asked if you want to continue to install Musicmatch. Click **Yes** to use Musicmatch with the DJ Ditty.

- When prompted to restart your computer, select **Yes** to restart the computer and enable the software.




Connect the DJ Ditty and Charge the Battery

- Ensure that your computer is turned on.
- Connect the DJ Ditty directly to a USB port on your computer.
NOTE: Use a USB extension cable (not included) if access is inconvenient.
- To charge the battery, leave the DJ Ditty plugged into the USB port for 2.5 hours.

NOTE: Always wait until File Transfer is complete before disconnecting the DJ Ditty from the computer.

NOTE: Do not use your DJ Ditty for the first time until you have charged the battery for at least 2.5 hours.

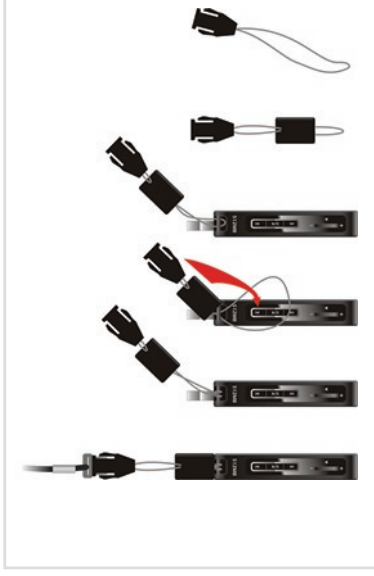


Attach the Lanyard

- Slide the USB protective cap over the small cable.
- Loop the small cable through the lanyard attachment on the Dell DJ Ditty.
- Pass the clip and the USB protective cap through the loop.
- Pull the clip and USB protective cap to secure the small cable.
- Snap on the large lanyard loop.

See:

- *Dell DJ Ditty Owner's Manual* for more information on setting up and using the DJ Ditty.
- support.dell.com for the latest updated information, frequently asked questions, and latest software downloads.

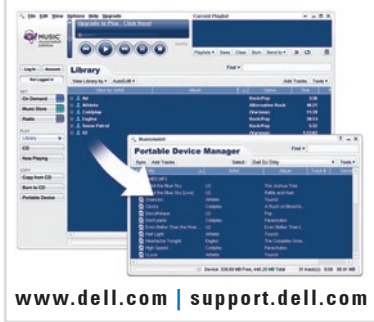

Transfer Files Using Musicmatch

Use Musicmatch to convert or 'rip' music CDs to digital music files.

- Click **Start > All Programs > Musicmatch Jukebox**.
- Click **View > Portable Device Manager**.
- Locate and click the tracks that you want to copy, and drag and drop the files to the DJ Ditty.

NOTE: For more information, see Musicmatch Help (click **Start > All Programs > Musicmatch Jukebox**; click **Help**)

Play Digital Music

- Press the **home/power** button once to access the main menu.
- Move the **volume/scroll/select** dial to the left or right to highlight **Music Library** and then press in the **volume/scroll/select** dial to select.
- Highlight **Music** and then press in the **volume/scroll/select** dial to select.
- Press the **play/pause** button.

NOTE: The DJ Ditty can play tracks in MP3 and WMA formats.

Listen to FM Radio

- Press the **home/power** button once to access the main menu.
- Move the **volume/scroll/select** dial to highlight **FM Radio** and then press in to select.
- Highlight and then select **Yes** to autoscans the 10 strongest radio stations.
- Use the **fast forward** or **rewind** buttons to change stations.

NOTE: To turn the DJ Ditty on or off, ensure that it is disconnected from your computer, then press and hold the **home/power** button for 2 seconds.

CAUTION: SAFETY PRECAUTIONS

- Do not store in areas below -10°C/14°F or above 45°C/113°F.
- Do not operate below 0°C/32°F or above 40°C/104°F.
- Do not expose to heat or incinerate.
- Keep away from strong magnetic fields.
- Keep away from excessive moisture.
- Do not get your Dell DJ Ditty wet.
- Do not dismantle.

NOTICE: Do not subject the DJ Ditty to excessive force or impact, which may damage the unit.

NOTICE: Always keep the USB protective cap attached when your Dell DJ Ditty is not connected to a computer.

NOTE: To use the Dell DJ Ditty with your computer, your computer must be running the Microsoft® Windows® XP operating system with Service Pack (SP) 1 or later and Windows Media Player 10 or later.